



Roll-up Tonneau Cocver

Installation Instrutions

Address: Cl Dong Avenue East Coastal Area,,Cixi City,Zhejiang province

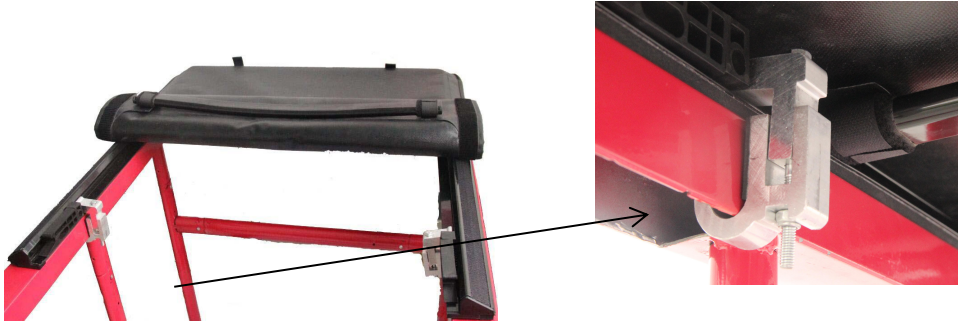

- ① Secures the side rails on the Left and Right.
- ②. High Strength 6063 Aluminum Mounting Clamps secures the side rails to your truck for a No Drill installation. Only tool needed is a 17mm socket & ratchet, with 4 pcs clamps

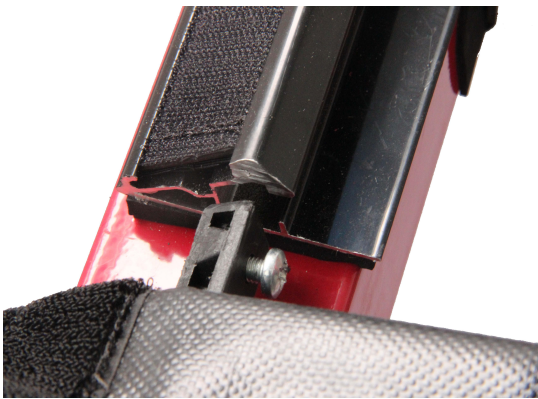

- ③ Secures the cover connected with the side rails.



- ④ Roll-up the cover on the magic tap. High Strength 6063 Aluminum Rails are epoxy powder coated to give you the durability to hold up under all severe weather conditions.



- ⑤ Single Latch design helps to simplify the opening and closing of the cover.



Application:

- 1. GMC/Chery pick up
- 2. Dodge Ram 1500/2500/3500 pick up
- 3. Ford F-15-/250/350 pick up
- 4. Greatwall V240.V200
- 5. Mazda BT-50
- 6. Mitsubishi Raider/Triton
- 7. Nissan Titan/Navara/Frontier
- 8. TOYOTA Tacoma/Tundra/Hilux/Hilux Revo
- 9. VW Amarok

Facebook/Twitter: Diroancover Wechat: yy7974885