


Tri-Fold Tonneau Cocver Installation Instrutions

Address: CI Dong Avenue East Coastal Area,,Cixi City,Zhejiang province

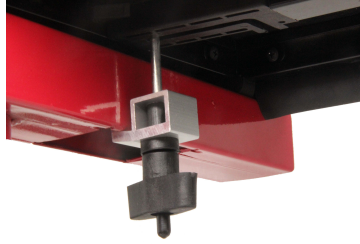

- ① Place cover on front of the bed
- ② Secure the champs Left and Right



- ⑤ Cover is laying down flat.
- ⑥ Secure rear clamps for a tight fit left and right.




- ③.Undo both clips so cover can be unfolded.
Unfold first section.
High quality craftsmanship and finished components
add to its value and style.

Features OE Grade Rubber Q Seals help form a water
resistant barrier



- ④ Unfold first section 2

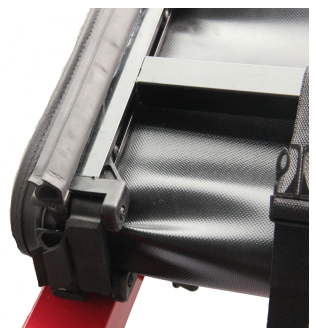

Application:

- 1.GMC/Chery pick up
- 2.Dodge Ram 1500/2500/3500 pick up
- 3.Ford F-150/250/350 pick up
- 4.Greatwall V240.V200
- 5.Mazda BT-50
- 6.Mitsubishi Raider/Triton
- 7.Nissan Titan/Navara/Frontier
- 8.TOYOTA Tacoma/Tundra/Hilux/Hilux Revo
- 9.VW Amarok